


WS7000 Touchless Dispense Sensor Installation

Below are instructions for installing the WS7000 Touchless Dispense Sensor. It can be ordered with part number:

7K Hands Free Module

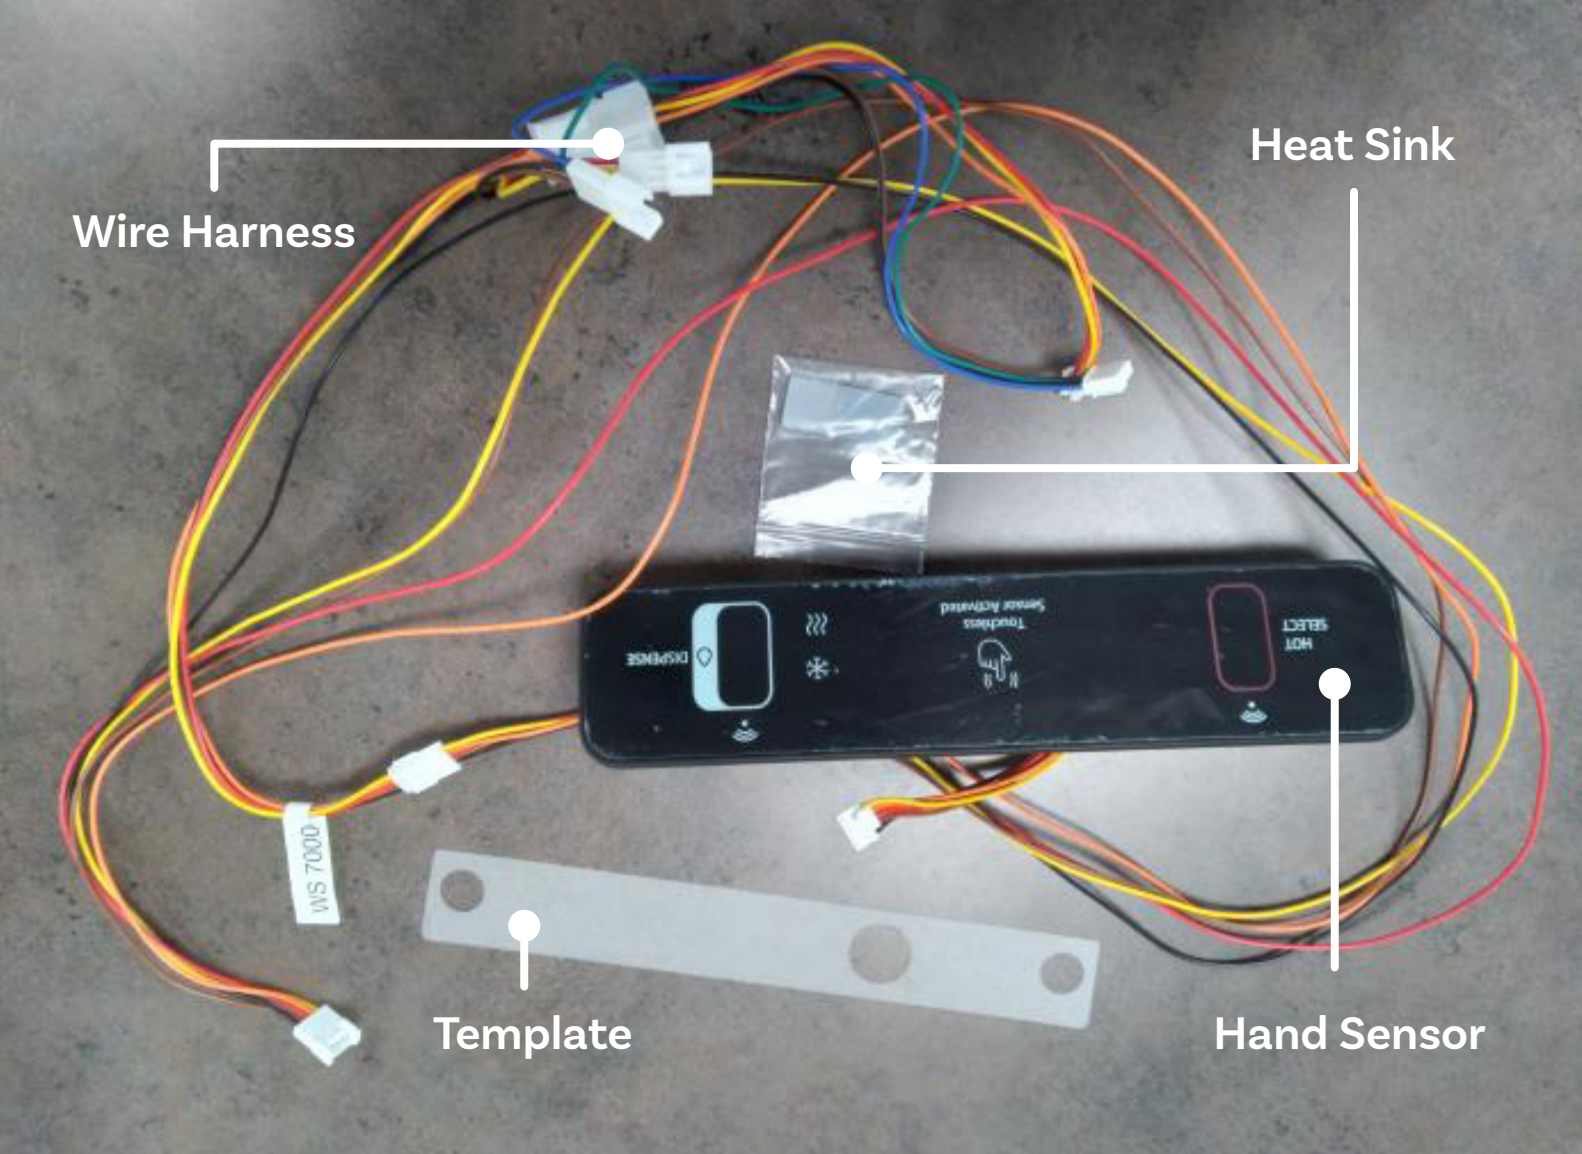

WHAT TO DO:

Step 1:

Remove the top panel, the lower front panel, and then gain access to the main board.

Step 2:

Center the template on top of the top front panel and secure it with tape. Using a 1/2" drill bit, drill out the center hole.



Step 3:

Run the wire harness through the newly drilled hole and down to the filter compartment.




Step 4:

Be sure the surface around the hole is clean. Remove the protective cover from the double sided tape on the bottom of the hand sensor and affix it over the hole the wires go through.




Step 5:

Remove this wire from the main board, and disconnect this harness.

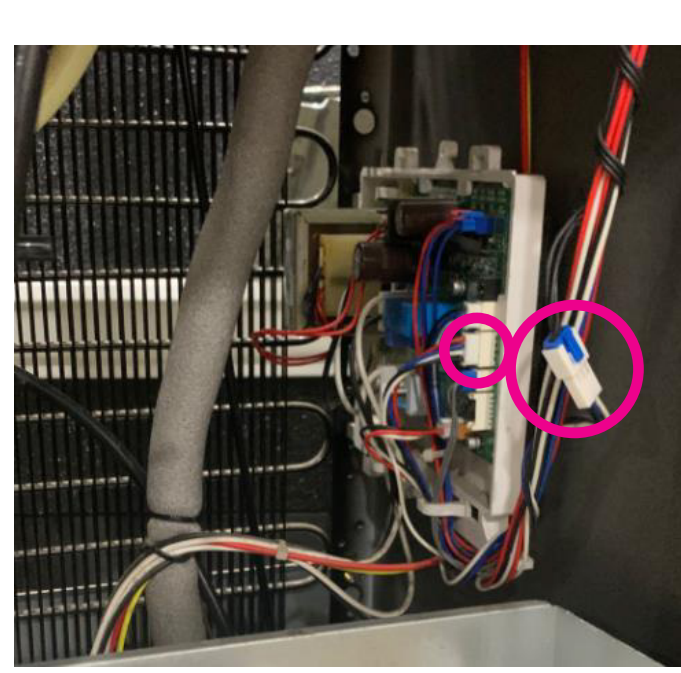


Step 6:

Connect the wire harness to the board. The original wires that were connected to the board get connected to the new wire harness. The new wire harness to the board get connected to the original wires.

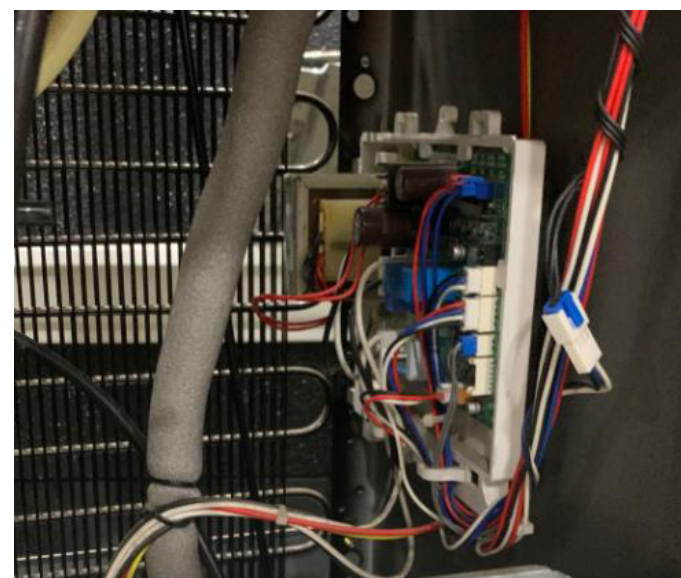

Step 7:

Remove the plastic cover from the heat sink and attach the heat sink to the transistor circled below. **The board will fail if this step is missed.**

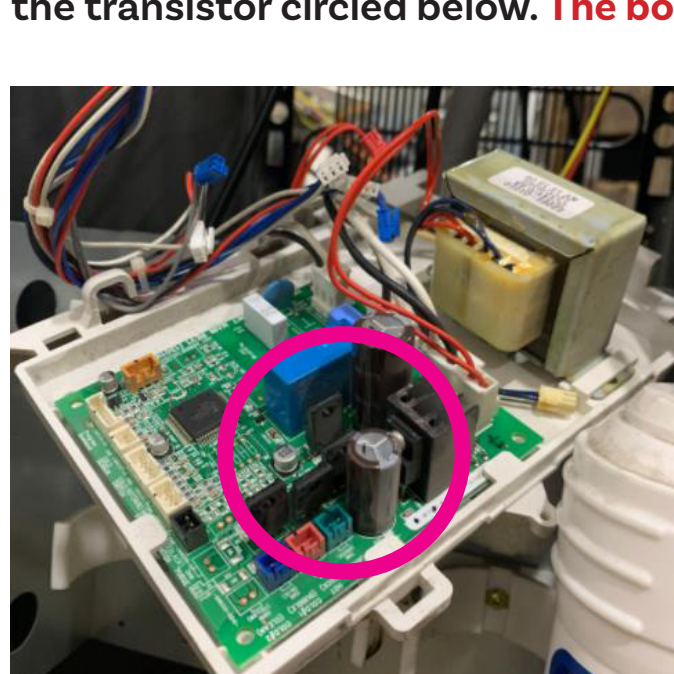

Step 8:

Test and reassemble the unit.

HOW TO USE

HOT


1. To dispense hot water, hover here for 3 seconds




2. Next, hover over the bottom of the indicated area here:

COLD

1. To dispense cold water, hover over the top of the indicated area here:

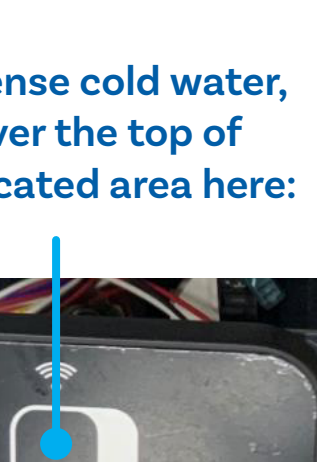

2. Next, hover over the bottom of the indicated area here:

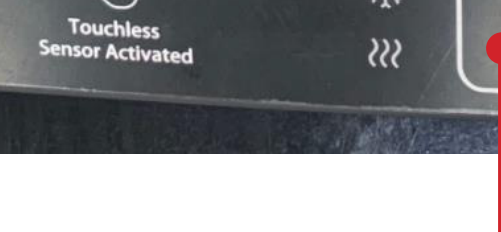

For additional tips or assistance, contact Wellsys technical support directly:

855-558-9796 - option 3

wellsys