


# WS11000 Touchless Dispense Sensor Installation


Below are instructions for installing the WS11000 Touchless Dispense Sensor. It can be ordered with part number: 11K Hands Free Module.

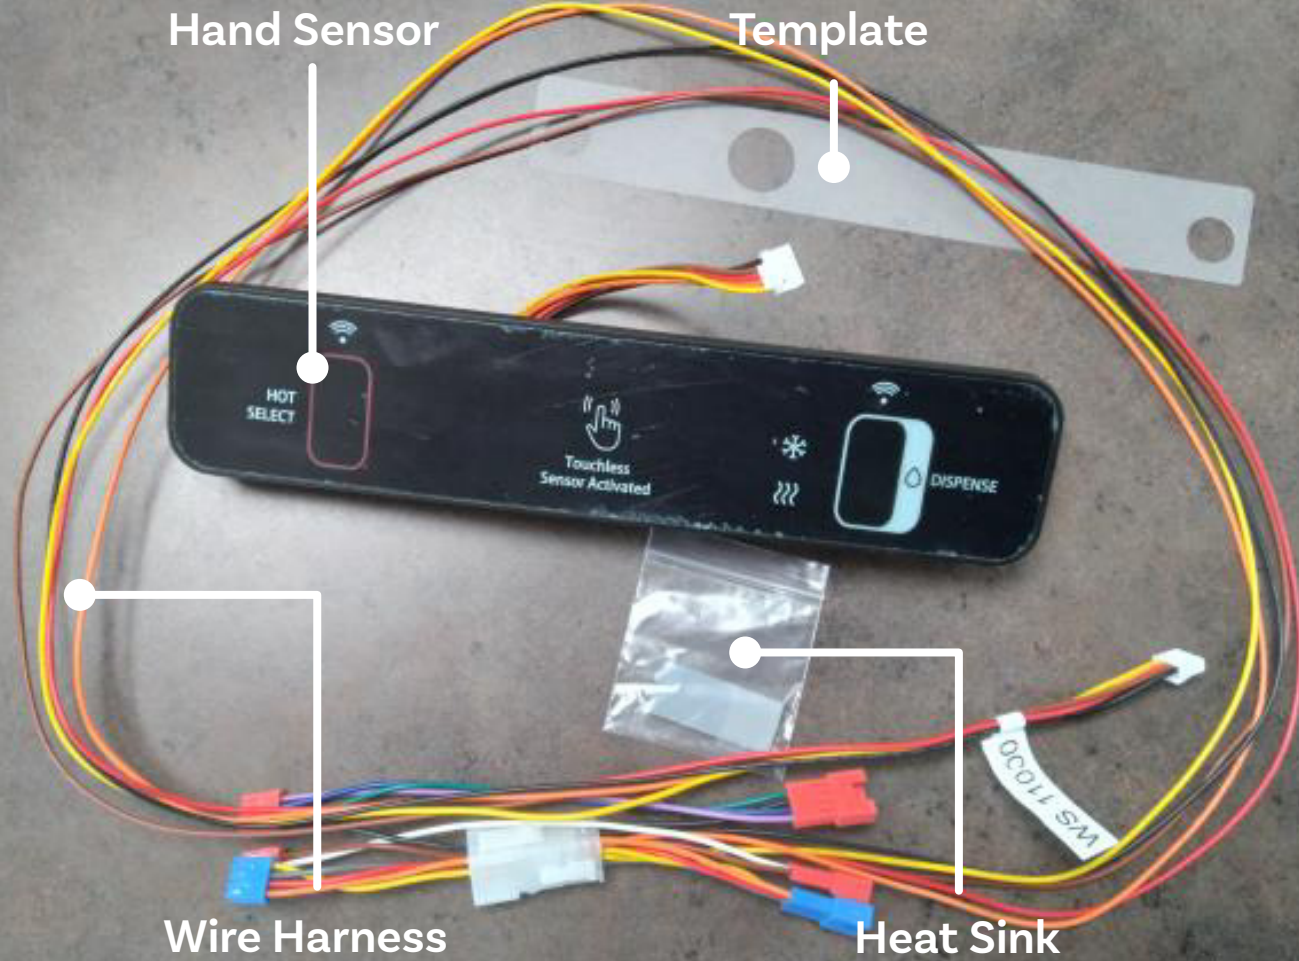


## WHAT TO DO:

**Step 1:**  
Gain access to the back of the display board.

**Step 2:**  
Center the template on top of the top front panel and secure it with tape. Using a 1/2" drill bit, drill out the center hole.

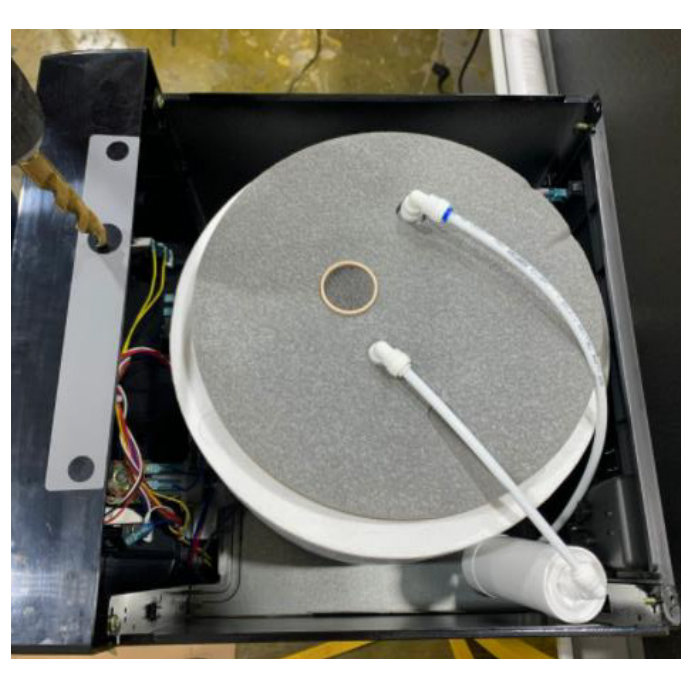


**Step 3:**  
Run the wire harness through the newly drilled hole.

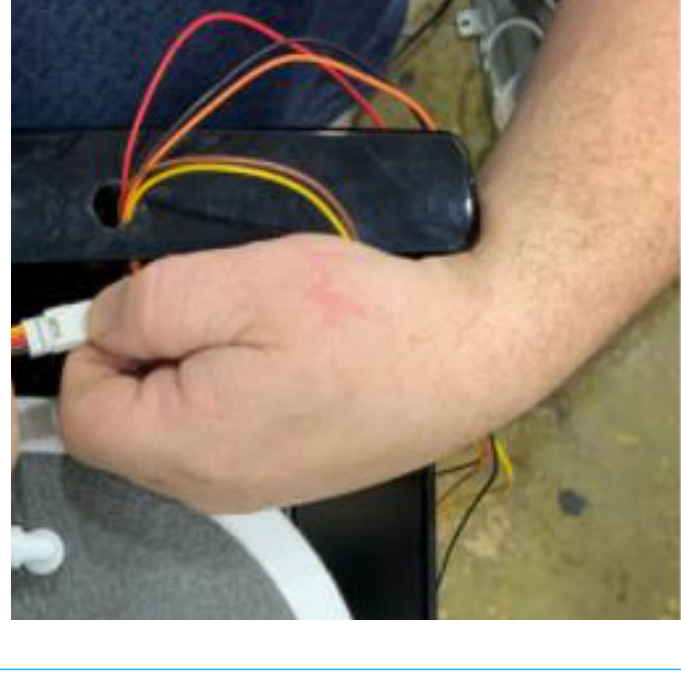

**Step 4:**  
Be sure the surface around the hole is clean. Remove the protective cover from the double sided tape on the bottom of the hand sensor and affix it over the hole the wires go through.




**Step 5:**  
Remove these wires from the main board.

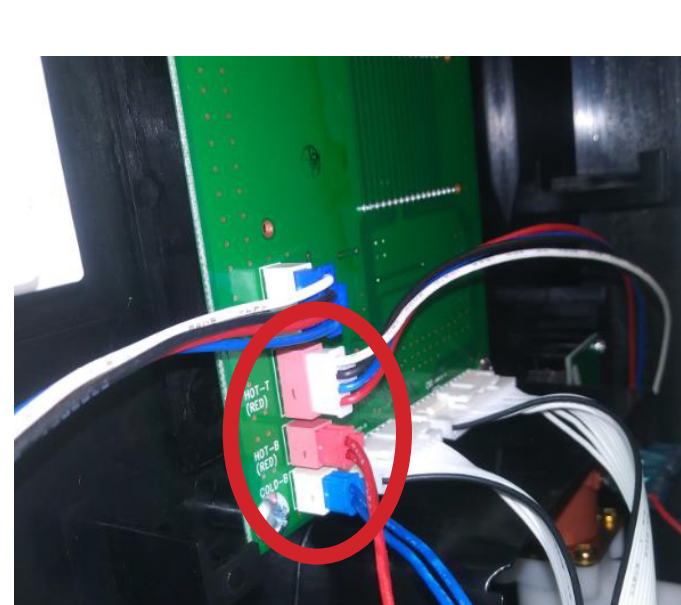

**Step 6:**  
Connect the wire harness to the board. The original wires that were connected to the board get connected to the new wire harness.



**Step 7:**  
Remove the plastic cover from the heat sink and attach the heat sink to the transistor circled below. **The board will fail if this step is missed.**

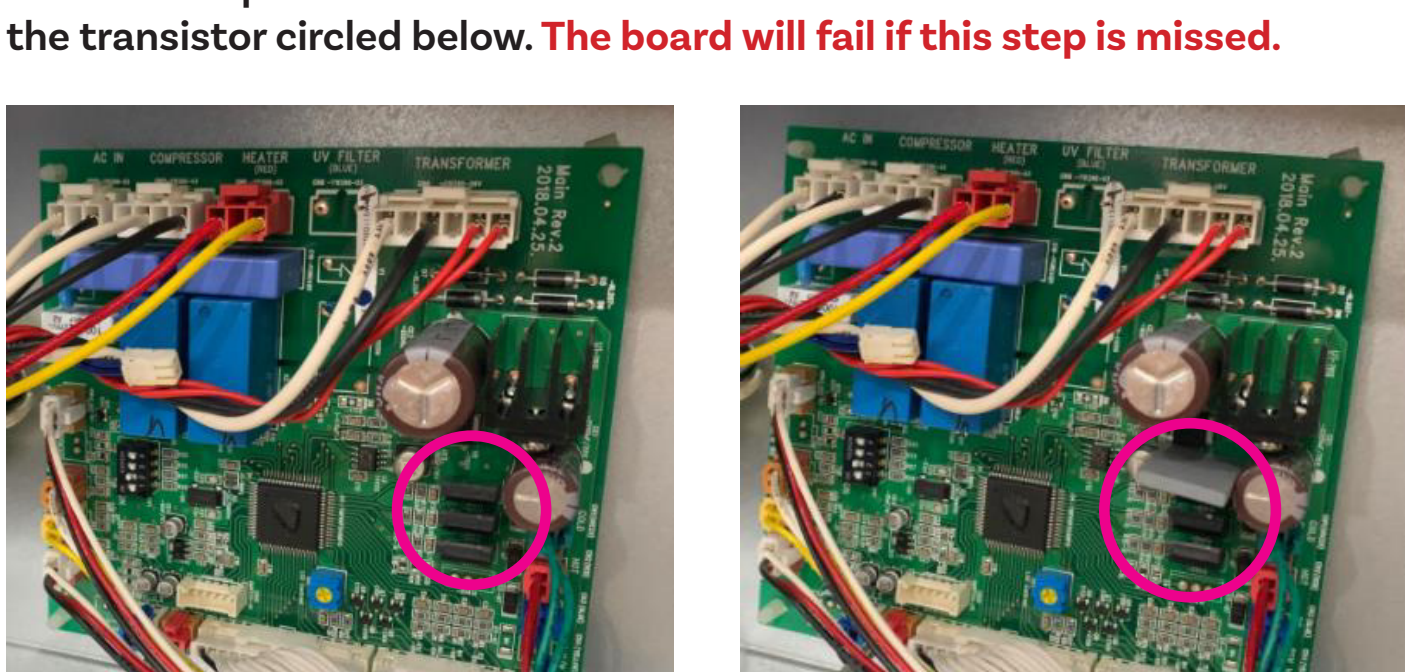

**Step 8:**  
Test and reassemble the unit.

## HOW TO USE

### HOT


1. To dispense hot water, hover here for 3 seconds



2. Next, hover over the bottom of the indicated area here:

### COLD

1. To dispense cold water, hover over the top of the indicated area here:

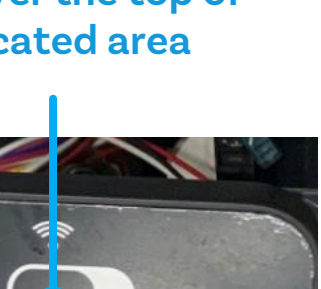

For additional tips or assistance, contact Wellsys technical support directly:  
855-558-9796 - option 3

