


WS11000 Touchless-Dispense Foot Pedal Installation Guide


Below are instructions for installing the WS11000 Touchless-Dispense Foot Pedal.
Part number: WS11000FTPDLK




WHAT TO DO:

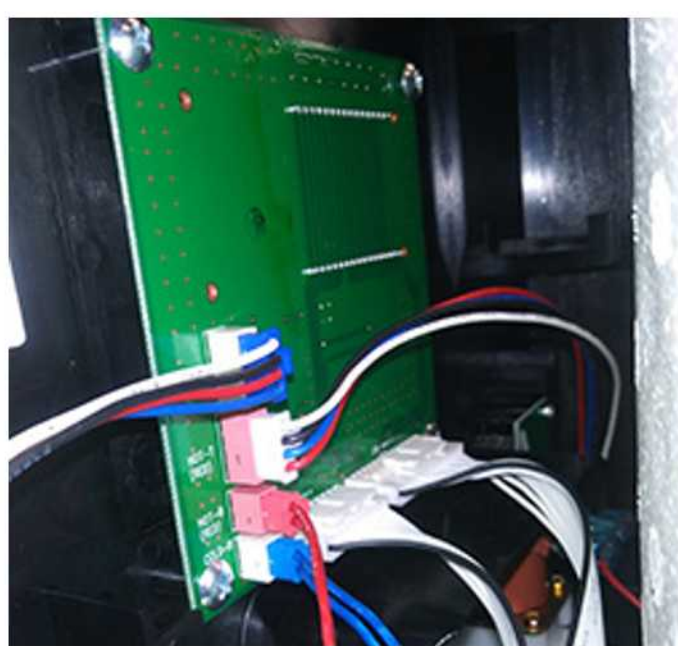

Step 1: Gain access to the display board.
Note: Remove front panel, but leave the wires connected to the display board.

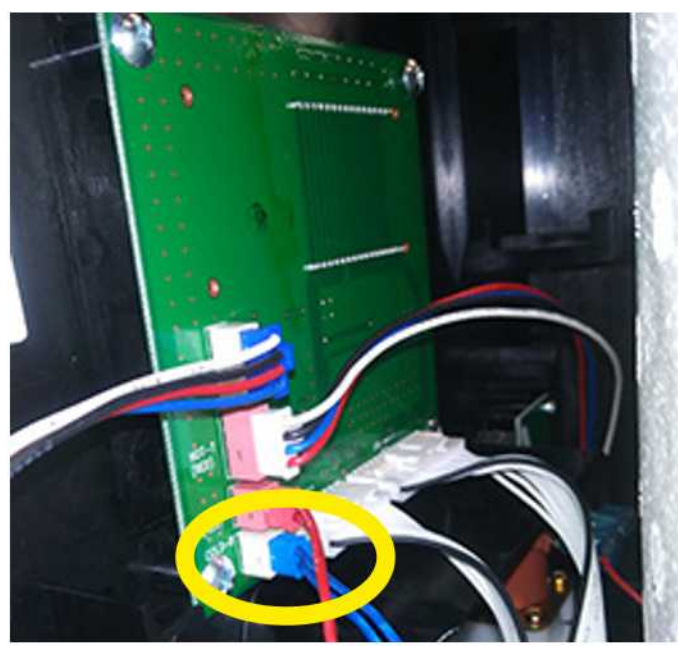

Step 2: Remove the double blue wire that connects the touch sensor to the display board.

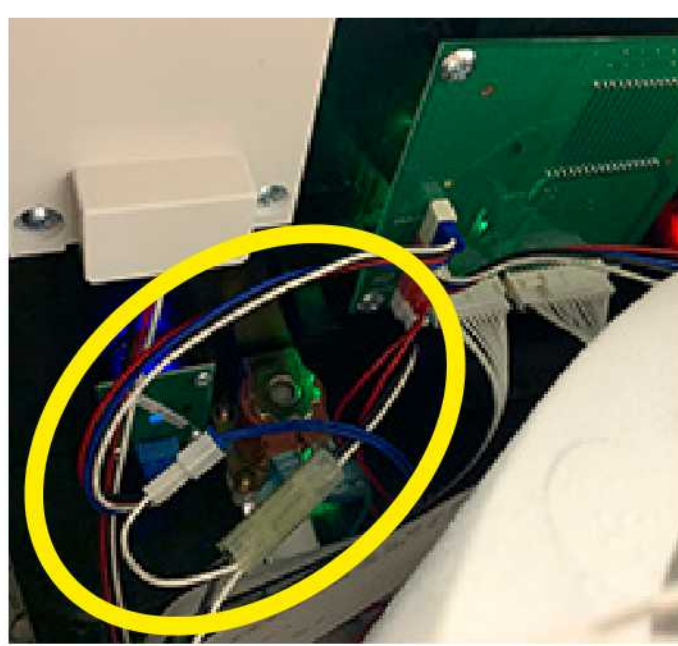

Step 3: Connect the wire harness for the foot pedal to the display board and the touch pad.

Step 4: The wire that connects to the foot pedal should be routed through the unit to connect to the foot pedal.

Note: Be sure to position the pedal and route the wire from the foot pedal into the machine so that there is no excess wiring that could cause a tripping hazard.



Step 5: Test and reassemble the unit.

For additional tips or assistance, contact Wellsys technical support directly:
855-558-9796 - option 3

wellsys 