


WS7000 Touchless-Dispense Foot Pedal Installation Guide


Below are instructions for installing the WS7000 Touchless-Dispense Foot Pedal. It can be ordered with part number: **WS7000FTPLK**.




WHAT TO DO:

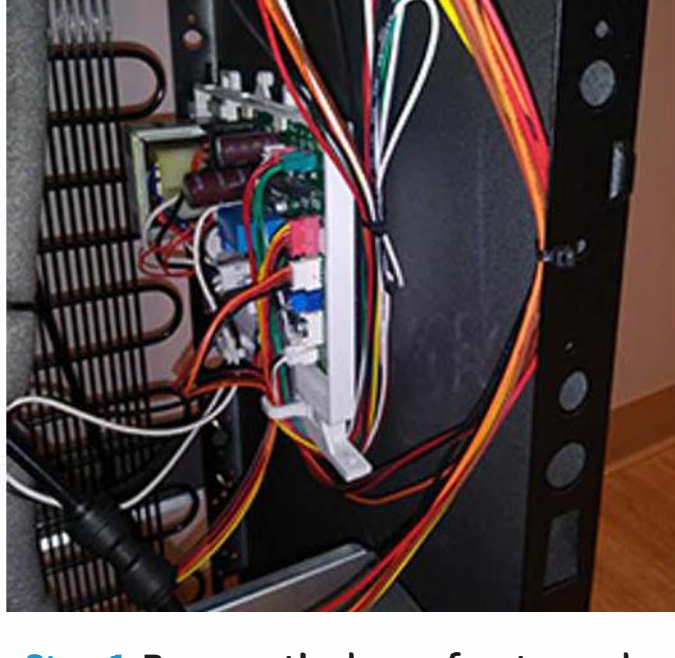

Step 1: Remove the lower front panel and Gain access to the main board.

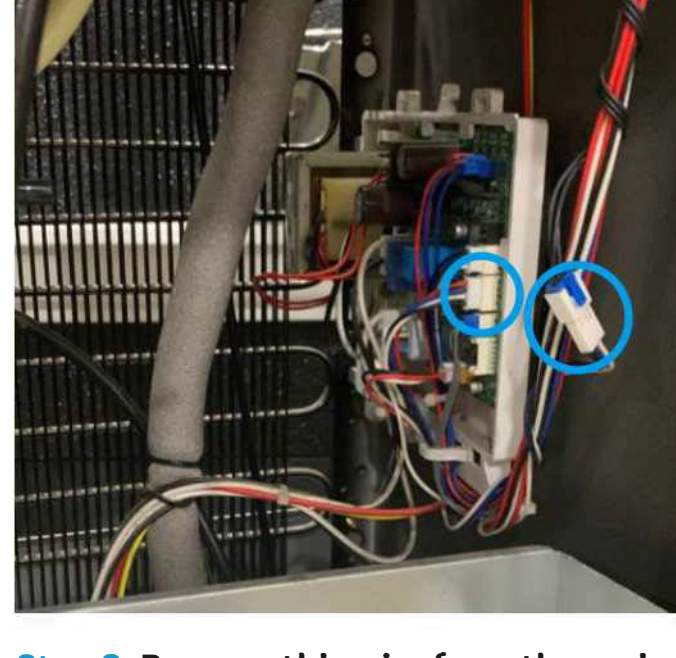

Step 2: Remove this wire from the main board, and disconnect this harness

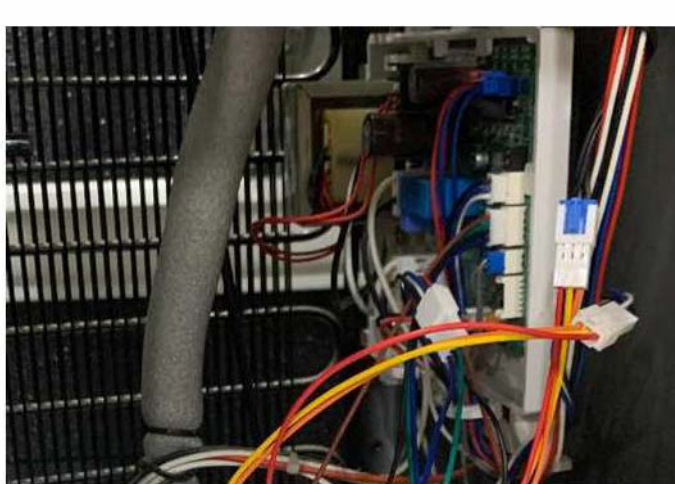


Step 3: Connect the wire harness to the board. The original wires that were connected to the board get connected to the new wire harness.



Step 4: Connect the wire harness to the supplied circuit board. Be careful when placing this board so it does not touch any metal surfaces. Connect the small white wires to the corresponding hot and cold locations.

Green: Wire harness to main board
Blue: Cold
Red: Hot

Note: Board should be mounted with double-sided tape to the outside of the white plastic main-board housing within the machine.

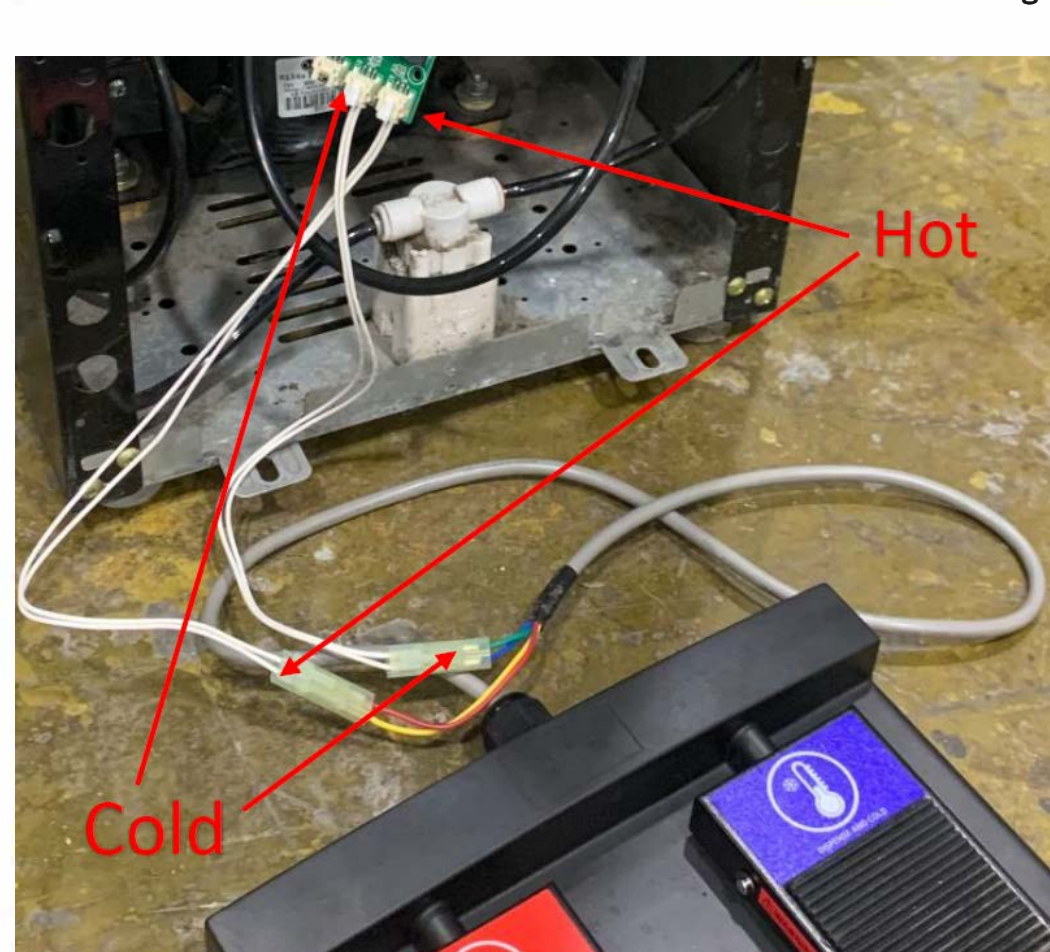

Step 5: The white wires that connect to the foot pedal should be routed through the unit and connected to the proper pedal connector. The cold wire connects to the blue/green connector, and the hot wire connects to the red/yellow connector.

Step 6: Test and reassemble the unit.

HOW TO USE THE DUAL PEDAL SYSTEM



HOT

1. Press and hold **RED** pedal for 3 seconds until it beeps.

2. Press **BLUE** pedal to dispense hot water.

COLD

1. Press **BLUE** pedal to dispense cold water.

For additional tips or assistance, contact Wellsys technical support directly:

855-558-9796 - option 3

wellsys 